

Classified

LIGHTOLIER

by @signify

IS-MG1R

Mini Gimbal Dual Select

Instructions for Installation and Operation

⚠ WARNINGS

- Read all instructions before starting to install fixtures.
- Retain these instructions for future reference.
- This product is for installation indoors only.
- DANGER - RISK OF FIRE, INJURY AND DEATH. This fixture must be installed in accordance with local electrical codes and ordinances. All work must be done by a qualified electrician.
- DANGER – RISK OF FIRE, INJURY AND DEATH. Make certain power is OFF from the electrical panel before starting installation or attempting any maintenance.
- DANGER RISK OF FIRE INJURY AND DEATH. Do not damage insulation on wires. Do not expose wires to sharp edges or objects.
- Secure and protect incoming supply wire and any control wire with a suitable cable restraint (supplied by installer).
- Only supply voltage as labeled on the product.
- Fixture must be properly grounded.
- Do not install if any part appears to be damaged.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Conforme CAN ICES-005 (B) / NMB-005 (B)
- Mini Gimbal Downlight DS max. operating temp under IC rated environment 25°C

1

Classified

IS-MG1R

Mini Gimbal

installation


STEP 1

Confirm that there is no electrical power on the circuit where the luminaire will be connected.

STEP 2

Use the Installation template provided to make the hole in the ceiling, if needed you can use the dimensions provided below for different size luminaires:

3-inch round	Ø3"(78mm)
4-inch round	Ø4-1/4"(108mm)
6-inch round	Ø6-1/4"(158mm)

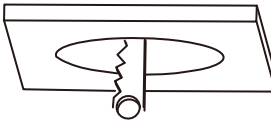

2


Classified

IS-MG1R

Mini Gimbal

STEP 3

Open the splice box cover and only remove the knockout needed. Incoming wires must be secured with an appropriate restraint (provided by installer).

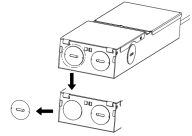

STEP 4

Secure the splice box to the building structure in accordance with applicable codes.



WARNING – Attach the Driver/Splice Box to a secure structural part of the building per applicable codes. Use optional 10 foot long extension cord (sold separately) if additional cord length is needed. Only one extension cord may be used with each luminaire.

3

Classified

IS-MG1R

Mini Gimbal

Driver Wiring

STEP 5

WITH THE POWER OFF, make electrical connections as shown in Fig 1 below.

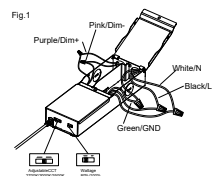


Fig.1

 
Purple/Dim+
White/N
Black/L
Green/GND

WARNING RISK OF FIRE, INJURY AND DEATH. Use wire nuts provided which are thermally rated for use in a luminaire splice compartment. Box must be grounded.

Note: Select and adjust Lumen and Color settings (where provided) BEFORE installing the luminaire into the ceiling.

STEP 6

Carefully place all wiring into the splice box and close the cover.



WARNING Risk of Fire - Be careful not to crush or cut wires when closing the splice box cover.

4


Classified

IS-MG1R

Mini Gimbal


STEP 7

Select desired the color temperature and lumen output with the switches (see image below) BEFORE installing in the ceiling. Factory default settings of 4000K and max lumens.

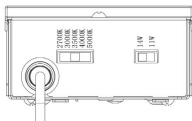

STEP 8

Place the cord from the Driver/Splice box through the opening in the ceiling and connect it to the cord from the fixture by inserting connectors (1 & 2) and then securing them together using the threaded collar.

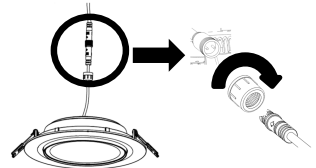

***Note: Select Lumen and Color settings (where provided) BEFORE installing the luminaire into the ceiling.**

5


Classified

IS-MG1R

Mini Gimbal

STEP 9

Hold the luminaire to insert one spring through the ceiling hole and then bend the other spring upward to insert it through the hole.

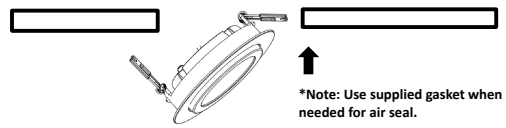

***Note: Use supplied gasket when needed for air seal.**

WARNING Risk of Fire - Be careful not to crush or cut cord when routing cord from driver to luminaire

WARNING Risk of Fire - For Gimbal luminaires, do not remove limit screw or over-tilt feature which are provided to prevent over-rotation and over tilting the Gimbal which can damage wires.

@signify

© 2021 Signify Holding. All rights reserved. The information provided herein is subject to change without notice. Signify does not give any representation or warranty as to the accuracy or completeness of the information included herein and shall not be liable for any action in reliance thereon. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract, unless otherwise agreed by Signify.

2/28/2022 page 1 www.lightolier.com

Signify North America Corporation
400 Crossing Blvd, Suite 600
Bridgewater, NJ 08807
Telephone 855-486-2216

Signify Canada Ltd.
281 Hillmount Road,
Markham, ON, Canada L3C 2S3
Telephone 800-668-9008

All trademarks are owned by Signify Holding or their respective owners.

6

6