LIGHTOLIER

by Signify

Calculite

442295492541

IS ACCENT TRIM

Instructions for MESOPTICS films installation

1. REMOVE TRIM FROM CEILING.
2. TO REMOVE OPTICAL FILM, FORCE IT WITH YOUR HAND UNTIL IT COMES OFF.
3. ATTACH MESOPTICS FILM FROM THE CORNERS (SEE FIG 3). FILM DIRECTION MUST BE ATTACHED SHINEY SIDE UP.
4. ATTACH TRIM TO CEILING.

C3SA
Installation steps.

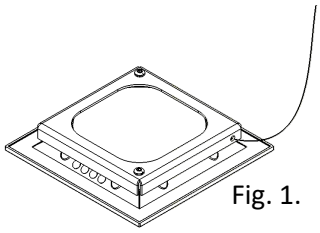

Fig. 1.

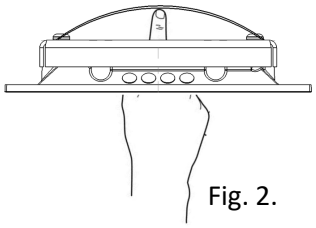

Fig. 2.

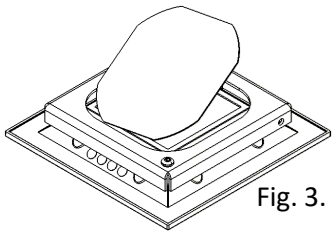

Fig. 3.

C3RA
Installation steps.

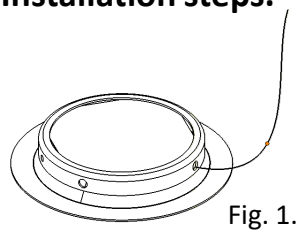

Fig. 1.

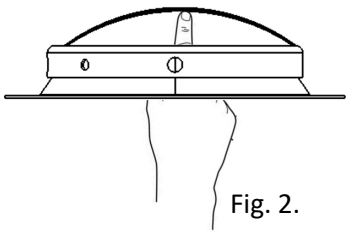

Fig. 2.

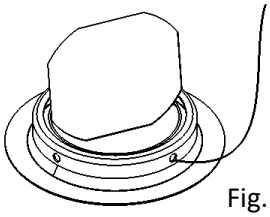

Fig. 3.

Signify

©2019 Signify Holding. All rights reserved. This document may be subject to change. No representation or warranty as to the accuracy or completeness of the information included herein is given and any liability for any action in reliance thereon is disclaimed. All trademarks are owned by Signify Holding or their respective owners.

Signify North America Corporation
200 Franklin Square Drive,
Somerset, NJ 08873
Telephone 855-486-2216

Signify Canada Ltd.
281 Hillmount Road,
Markham, ON, Canada L6C 2S3
Telephone 800-668-9008