EM Kit Installation

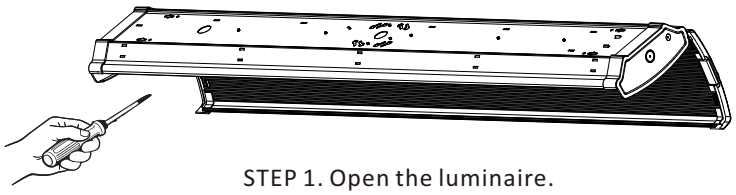

STEP 1. Open the luminaire.

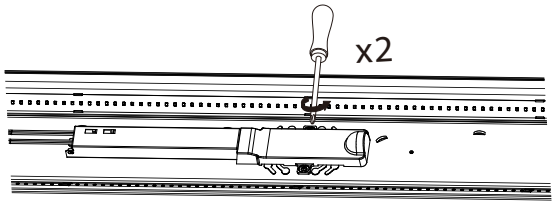

STEP 2. Unscrew the plate provided covering the wiring.

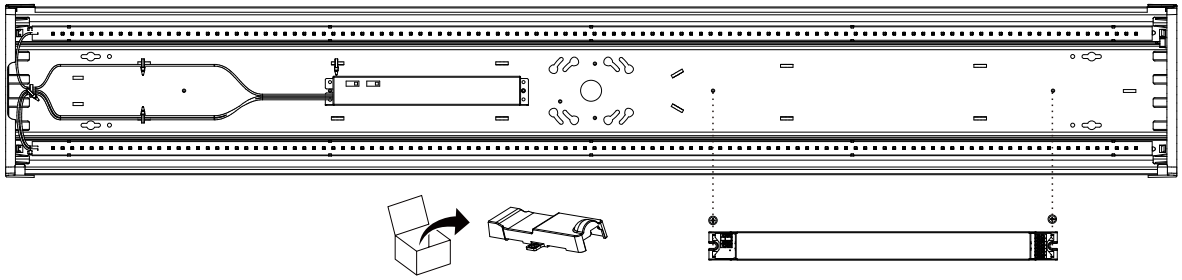

STEP 3. Install the EM driver as shown in the picture and secure with screws.

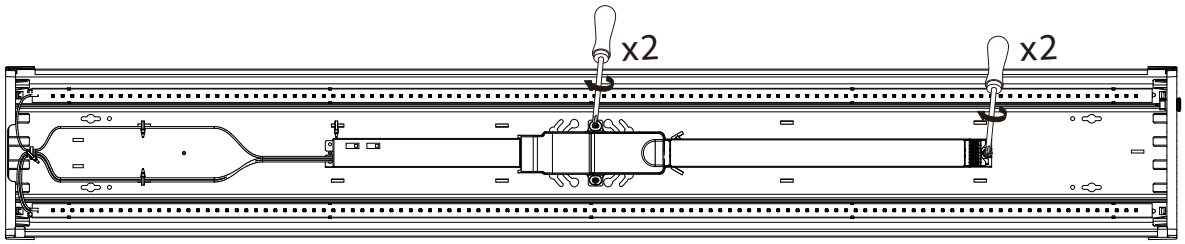

STEP 4. Complete wiring per drivers installation instructions and cover wiring back again with the provided plate.

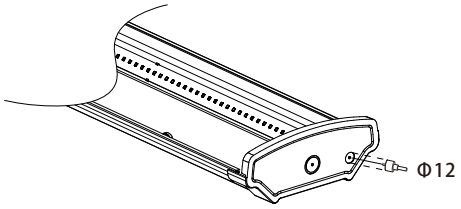

STEP 5. Test switch should go through the end cap knock out marked in the picture.

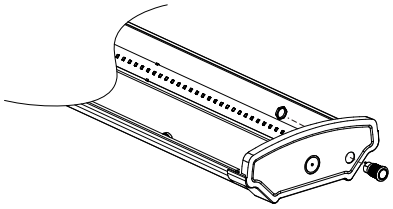

STEP6

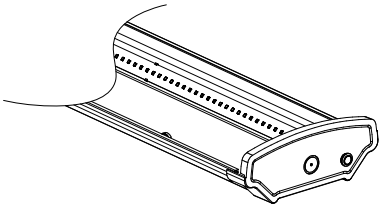

STEP7

The wraparound luminaire is compatible with BSL10T3 / BSL06T3 (ordered separately)
Wire the EM kit according to the wiring diagram below.

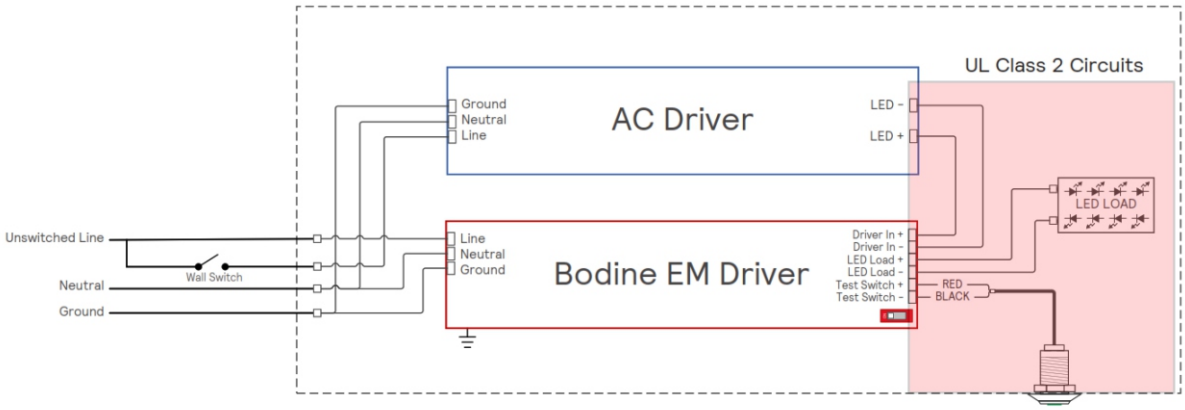

NOTE: Emergency driver case or green connector must be grounded

For FCC Part 15B compliance, install the supplied ferrite as illustrated below.

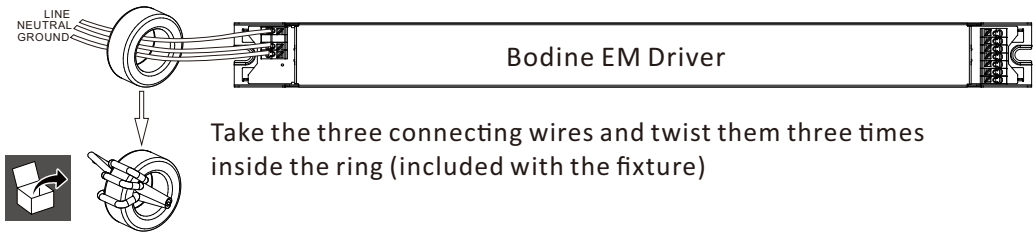

Take the three connecting wires and twist them three times inside the ring (included with the fixture)